

The SubliJet / ChromaBlast QuickConnect and ArTainium EasyFlow Bulk Ink Systems (BIS) for the Epson WF30, T30 and B40W printers contain a cartridge with five individual dampers that is used in place of the individual OEM (Epson) cartridges. This BIS cartridge has a single chip that periodically needs to be reset so that the printer can continue to use ink from the BIS. The frequency of this reset action will depend upon the number of images that are printed and the printer settings.


The following are simple instructions for resetting the bulk ink system.

Once the printer 'recognizes' that the ink levels have reached a certain level, it will cease to print, and the **orange** ink-out light will start to flash.

1. Press the ink-out button until the ink carriage moves into the far right position. The ink carriage will come to rest in the carriage bay area.



2. Press the white reset button at the top of the bulk ink system ink cartridge array.

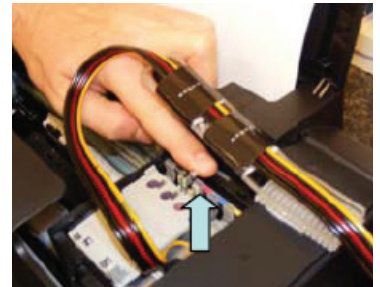

3. Press the ink-out button on the front of the printer.



The printer will begin to reset and recharge. After the printer has completed the resetting activity, the **orange** light will turn off. At this point, the BIS has been successfully reset, and the printer is again ready for use.

Note:

If the reset process described does not reset your bulk ink system, please contact Technical Support at 888-253-1679

e-mail

[support@](mailto:support@sawgrassink.com)

sawgrassink.com

Epson WF-1100 Bulk Ink Systems **Chip Reset Instructions**

The SubliJet / ChromaBlast QuickConnect and ArTainium EasyFlow Bulk Ink Systems (BIS) for the Epson WF1100 printer contains a cartridge with five individual dampers that is used in place of the individual OEM (Epson) cartridges. This BIS cartridge has a single chip that periodically needs to be reset so that the printer can continue to use ink from the BIS. The frequency of this reset action will depend upon the number of images that are printed and the printer settings.

The following are simple instructions for resetting the bulk ink system.




Once the printer 'recognizes' that the ink levels have reached a certain level, it will cease to print, and the **orange** ink-out light will start to flash.

1. Press the ink-out button until the ink carriage moves into the far right position. The ink carriage will come to rest in the carriage bay area.

2. Press the white reset button at the top of the bulk ink system ink cartridge array.

3. Press the ink-out button on the front of the printer.

The printer will begin to reset and recharge. After the printer has completed the resetting activity, the **orange** light will turn off. At this point, the BIS has been successfully reset, and the printer is again ready for use.

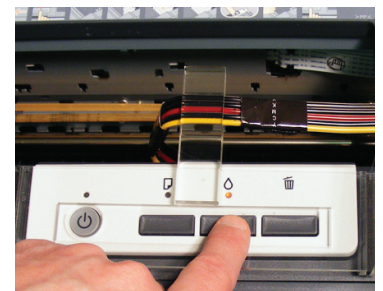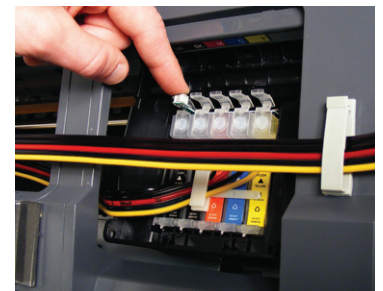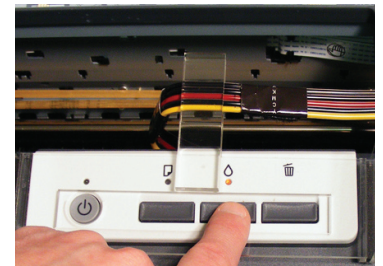

Note:

If the reset process described does not reset your bulk ink system, please contact Technical Support at 888-253-1679

e-mail

[support@](mailto:support@sawgrassink.com)

sawgrassink.com

