


















Printer Indicator Lights for an Epson Workforce 1100

Light status	Condition / solution
 power on	The printer is turned on.
 power flashing	The printer is busy. Wait for the  power light to stop flashing before turning off the printer.
 paper on	Paper may be out. Load more paper in the sheet feeder and press the  paper button. If multiple sheets have fed into the sheet feeder, press the  paper button to resume printing.
 paper flashing	The printer cover may be open. Close the printer cover to continue. Paper may have jammed in the sheet feeder. Press the  paper button to eject any jammed sheets, then open the printer cover and remove any paper jammed inside. Press the  paper button again to clear the error.
 ink on	An ink cartridge is expended, incorrectly installed. If an ink cartridge is likely to be expended, you must replace the cartridge to be able to print. If this is a new ink cartridge from Sawgrass Technologies proceed to Troubleshooting chip errors .
 ink flashing	Ink in a cartridge is low. You can continue printing, or check which cartridge is low and replace it.
 power off  paper and  ink flashing alternately	Parts inside the printer are at the end of their service life or an unknown error has occurred. Contact Epson for help.
 power off  paper and  ink flashing fast	The print head is obstructed by paper or other foreign material. Turn off the printer, remove any obstructions, and turn it back on. If the error persists, contact Epson for help.