


R800/R1800 Bulk Ink System Installation Instructions

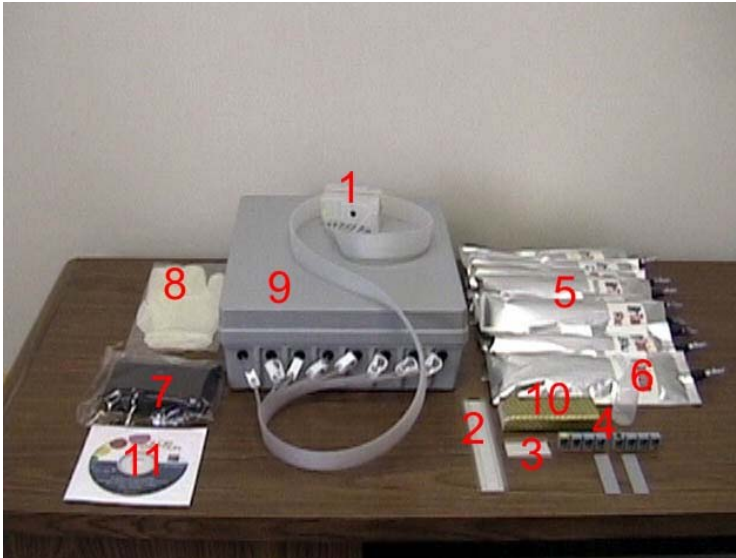

Please read this document thoroughly before installing the system to prevent voiding your warranty.


Check to ensure you have all components shown in picture.

1. Ink Cartridge + tubes
2. 1 x Long Tube Grip
3. 1 x Short Tube Grip
4. Chips
5. 8x Ink Bags
6. Small primer bottle
7. Cartridge Cover (Used R1800 Only)
8. Rubber Gloves
9. Ink Box
10. Foam Block used for R800 only
11. Color Correction CD

1. Clamp the tubes at the end of each line to prevent ink from entering the line before you clip on each bag. Then insert the ink bags into the ink box by clipping them into the connectors inside the box. Each section is marked with which color ink should be placed there.



2. Use the priming bottle to prime each line. To do this, unhook the clamp at the end of the line and squeeze the priming bottle to release all the air then insert it into the bottom of the cartridge to prime the line and fill it with ink. Once ink is in the reservoir, pinch together the clamp at the end of the line. Do this for each cartridge.

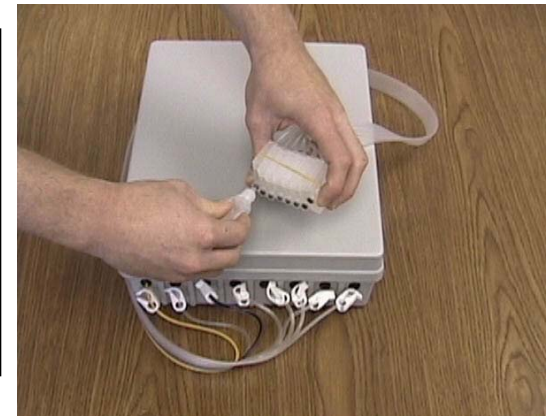

R1800 Printer Setup Instructions



1. Turn the printer on and press the cartridge replacement button.



2. The cartridge bay will shift into the remove position. Remove any installed cartridges.



3. Remove the cartridge cover by gently pushing on the right side and twisting it to the right.



4. Install the cartridge chips as shown above. Start by lining up the chip with the yellow dot with the yellow ink slot in the cartridge bay. Next line up the chip with the black dot with the black slot in the cartridge bay. Finally insert the plastic cross bars into place by sliding the notched end into the back of the chip holders.




5. Move the cartridge bay to the left of the gray bar before installing the cartridges. Attach the cartridges in this order .
**(from left to right) -
Yellow, Magenta, Cyan, Matte Black,
Black, Red, Blue, and Cleaning Solution**



6. When all cartridges are in place, attach the custom cover. When closing the cover be careful not to pinch the tubes.



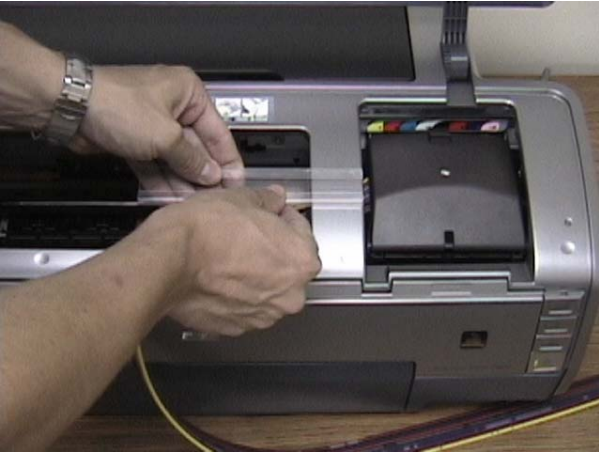

8. Place the large tube holder in the middle of the gray bar and attach it to the printer.



9. Attach the short tube holder to the right of the printer where the tubes hang down.



10. Congratulations you have successfully installed an R1800 Bulk Ink System.

R800 Printer Setup Instructions



2. Install the cartridge chips as shown above. Start by lining up the chip with the yellow dot with the yellow ink slot in the cartridge bay. Next line up the chip with the black dot with the black slot in the cartridge bay. Finally insert the plastic cross bars into place by sliding the notched end into the back of the chip holders.



3. Gently slide the cartridges through the hole in the cartridge cover. Start with the yellow cartridge on the left and attach the cartridges in this order: .
**(from left to right) -
Yellow, Magenta, Cyan, Matte Black,
Black, Red, Blue, and Cleaning Solution**



4. Attach the long tube holder to the printer on the top left hand corner next to the ink symbol.



5. Attach the short tube holder to the right of the printer where the tubes hang down.



6. Congratulations you have successfully installed an R800 Bulk Ink System.

Tips:

- Perform a nozzle check from the Epson driver utility— A few cleanings may be necessary to prime the system.
- You may want to remove the printer lid or leave it open at all times.
- You may have a little air in your lines but this will clear after a few prints.
- If you are going to leave your system without using it for several days you should clamp your lines with the tube clamps.
- Do not raise the ink box higher than the printer.
- Read the documentation on Configuring your Epson R800/R1800 printer driver. Follow those instruction for information on specific software packages.