


R800/R1800 Quick Connect Installation Instructions

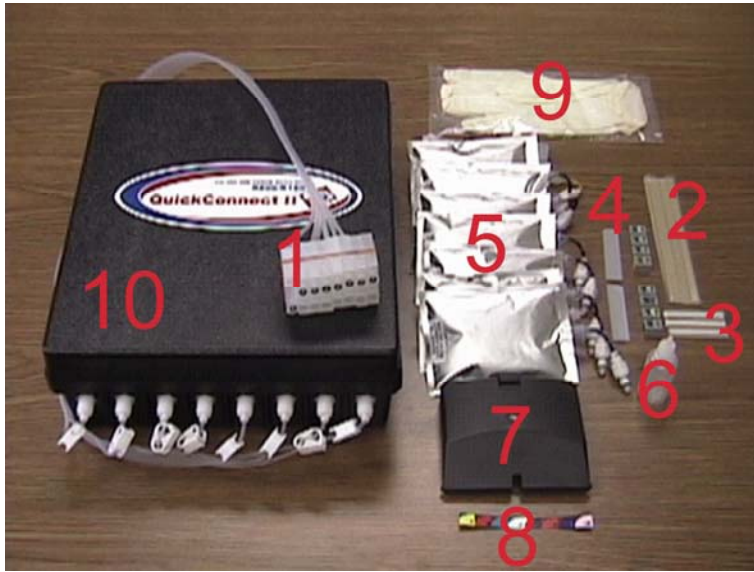

Please read this document thoroughly before installing the system to prevent voiding your warranty.

Check to ensure you have all components shown in picture.

1. Ink Cartridge + tubes
2. 1 x Long Tube Grip
3. 1 x Short Tube Grip
4. Chips
5. 8x Ink Bags
6. Small primer bottle
7. Cartridge Cover (Used R1800 Only)
8. Cartridge placement sticker
9. Rubber Gloves
10. Ink Box
11. Foam Block used for R800 only (Not Shown)
12. Power Driver CD (Not Shown)

1. Insert the ink bags into the ink box by clipping them into the connectors inside the box. Each section is marked with which color ink should be placed there.



2. Use the priming bottle to prime each line. To do this, squeeze the priming bottle to release all the air then insert it into the bottom of the cartridge to prime the line and fill it with ink. Do this for each cartridge.



R1800 Printer Setup Instructions



1. Turn the printer on and press the cartridge replacement button.



2. The cartridge bay will shift into the remove position. Remove any installed cartridges.



3. Remove the cartridge cover by gently pushing on the right side and twisting it to the right.



4. Apply cartridge placement sticker over the existing one on the cartridge bay.



5. Install the cartridge chips as shown above. Start by lining up the chip with the yellow dot with the yellow ink slot in the cartridge bay. Next line up the chip with the black dot with the black slot in the cartridge bay. Finally insert the plastic cross bars into place by sliding the notched end into the back of the chip holders.




6. Move the cartridge bay to the left of the gray bar before installing the cartridges. Attach the cartridges in this order .
(from left to right) - Yellow, Magenta, Cyan, Light Cyan, Black, Red, Blue, Light Magenta



7. When all cartridges are in place, attach the custom cover. When closing the cover be careful not to pinch the tubes.



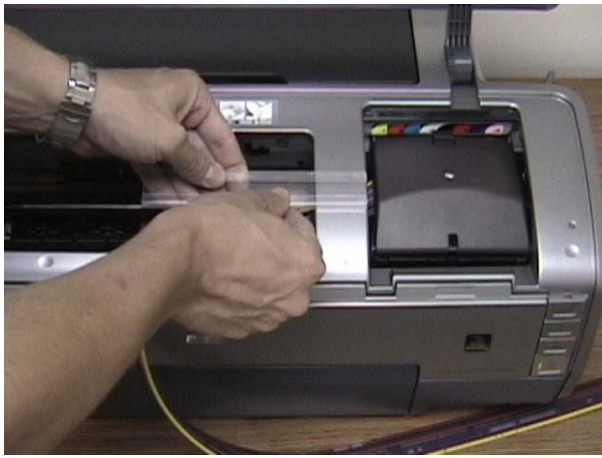

8. Place the large tube holder in the middle of the gray bar and attach it to the printer.



9. Attach the short tube holder to the right of the printer where the tubes hang down.



10. Congratulations you have successfully installed a R1800 Quick Connect II ink system.

R800 Printer Setup Instructions



1. Apply cartridge placement sticker over the existing one on the cartridge cover.



2. Install the cartridge chips as shown above. Start by lining up the chip with the yellow dot with the yellow ink slot in the cartridge bay. Next line up the chip with the black dot with the black slot in the cartridge bay. Finally insert the plastic cross bars into place by sliding the notched end into the back of the chip holders.



3. Gently slide the cartridges through the hole in the cartridge cover. Start with the yellow cartridge on the left and attach the cartridges in this order: .

**(from left to right) -
Yellow, Magenta, Cyan, Light Cyan, Black,
Red, Blue, Light Magenta**



4. Attach the long tube holder to the printer on the top left hand corner next to the ink symbol.



5. Attach the short tube holder to the right of the printer where the tubes hang down.



6. Congratulations you have successfully installed a R800 Quick Connect II ink system.

Tips:

- Make sure you install Power Driver XG from the CD that came with your Quick Connect II system. Refer to the Power Driver XG documentation and video tutorial on how to use Power Driver XG.
- Perform a nozzle check from Power Driver XG. A few cleanings may be necessary to get a good nozzle check.
- You may want to remove the printer lid or leave it open at all times.
- You may have a little air in your lines but this will clear after a few prints.
- If you are going to leave your system without using it for several days you should clamp your lines with the tube clamps.
- Do not raise the ink box higher than the printer.

