


Quick Start Installation of SubliJet IQ® for the EPSON Stylus® Pro 4880



IMPORTANT: Do not install Epson Inks provided with the printer. Please call Sawgrass Technical Support if you need assistance installing the SubliJet IQ inks.

STEPS FOR INSPECTING SUBLIJET IQ CARTRIDGES FOR LOOSE CHIPS:

1. Check the product package to ensure that the chip remains attached to the cartridge itself and has not dislodged in the plastic bag.
2. Determine if the chip is securely attached by tapping the cartridge a few times on a hard surface, watching to ascertain that the jolt does not dislodge the chip.
3. Once the cartridge is removed from the bag, rub an eraser over the surface of the chip, to determine if it remains stationary within it's mounting slot. Use of any item other than an eraser is not advised and can damage the chip. (See photo @ far right.)

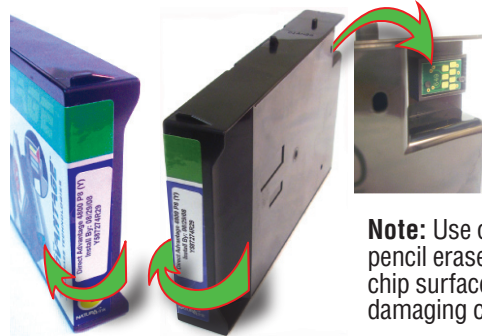

Rub chip with an eraser to determine stability of attachment to cartridge.

Note: Use only a pencil eraser to rub chip surface to avoid damaging chip.

Rotate Cartridge


CHIP LOCATION & ORIENTATION



INSTALLING SUBLIJET IQ CARTRIDGES:

If you are replacing existing cartridges because they are empty or low, please see the following instructions. If not, go directly to step #1.

When a cartridge is empty or extremely low, **"INK OUT"** will display on the LCD panel. Raise the ink levers on either side of the printer. The cartridge position indicator on the LCD panel will flash on and off, indicating which cartridge is low or empty. Be sure you have the correct color cartridge replacement for that position.

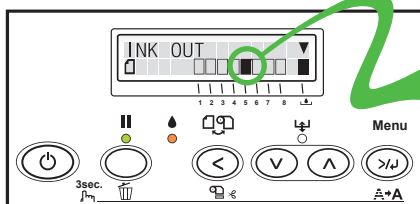


Position # 5: Empty or Extremely Low



4880 Control Panel

NOTE: The LCD Panel will indicate the ink colors of the original OEM ink configuration and not the SubliJet ink configuration. (See Figure # 3 to the right.)

1. Ensure the printer power is on. Press the ink compartment cover to release the latch and open the cover.

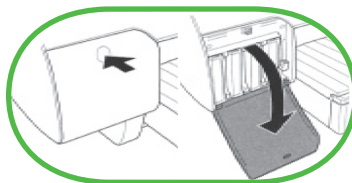


2. Raise both ink levers. (Located @ the right side of each ink cartridge compartment.)

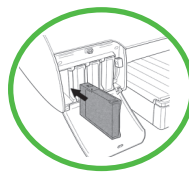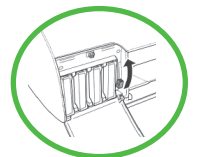


3. Install the ink cartridges into the color-coded slots in the order that your system is currently using, starting from left to right.

Note: Cartridge label must face left as cartridge is inserted into slot.

4. After all eight cartridges are installed, lower the ink levers.

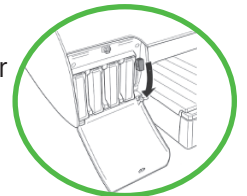


5. After approximately 1 minute, ink lever messages will appear on the LCD panel. The LCD will indicate that the printer recognized **"NON-GENUINE"** ink cartridges.

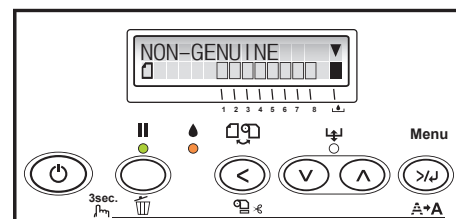


INSTALLING SUBLIJET IQ CARTRIDGES (CONTINUED):


6. Press the down key (V) until a message appears that asks the user whether the ink cartridges are **“NON-GENUINE”**.

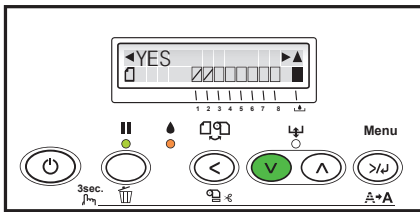


7. Press the left key (<) to acknowledge that the cartridges are **“NON-GENUINE”**.

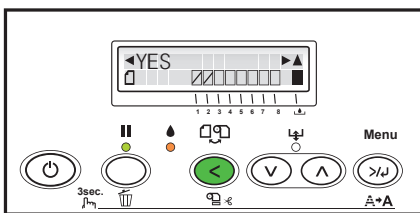


8. Press the left key (<) until the following message appears:

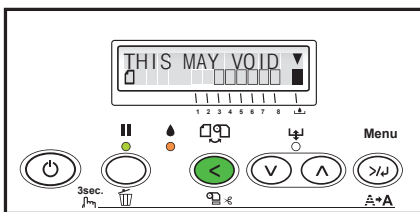


9. Press the down key (V) until the following message appears:

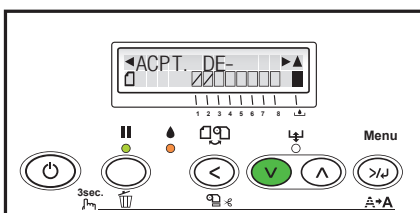


10. Press the left key (<) to accept acknowledgement of the warranty message.

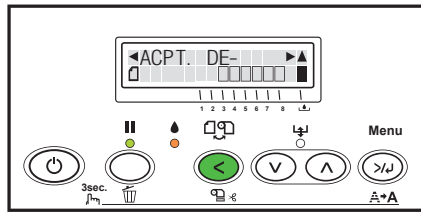


11. The following message will appear:

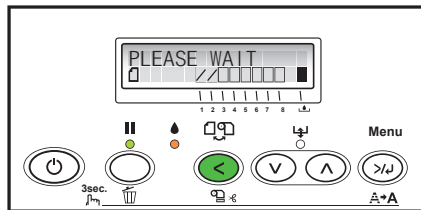


12. Then the following message:

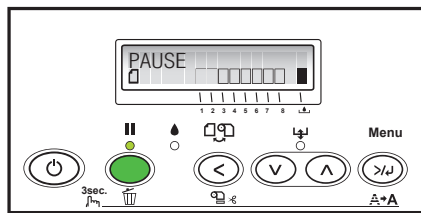

13. Press the **“PAUSE”** key once.

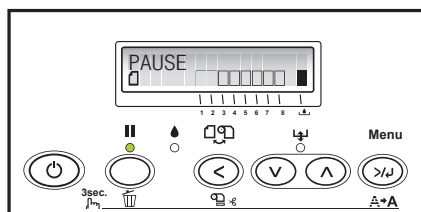

14. The following message will appear. The printer is now ready for use.

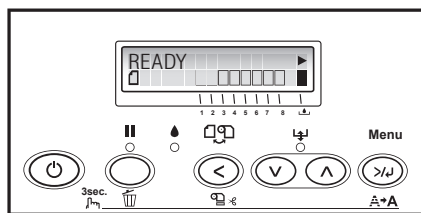

SubliJet IQ®

SubliJet IQ® sublimation ink systems offer a total solution for delivering sublimation inks.

By choosing the industry's highest-quality sublimation inks, **SubliJet IQ** users enjoy PartnerPlus® (a comprehensive support program) and PowerDriver® (the award winning, user-friendly software) which makes achieving high-quality digital images a simple reality. If you are new to sublimation or enjoy the peace of mind that comes with expert-level support, then think **SubliJet IQ** sublimation inks!



EPSON is a registered trademark of Epson Seiko Corporation. SubliJet, Partner Plus, and Power Driver are all registered trademarks of Sawgrass Technologies, Inc.