

Epson WorkForce 1100

Setup and Print Guide: Elements 8, 9 & 10

IMPORTANT: Before proceeding, please be sure you have the correct Epson OEM printer driver and PowerDriver IQ installed. For assistance with driver installation, refer to the Installation Guide.

NOTE: Your screens and menus may differ depending on the version of software and operating system you are using. However, the settings will be the same.

Elements Workspace Setup

Begin by opening an image in Photoshop Elements. At the top of the application click **Edit > Color Settings**. This will open the **Color Settings** window (see *FIGURE 1*).

- 1.) Configuring Color Settings: (see *FIGURE 1*)
 - a. **Color Settings > Choose how to manage color in your images:** > select the radio button for **No Color Management** (see *FIGURE 1 > A*).
 - b. Click **OK** to save your changes and continue (see *FIGURE 1 > B*).

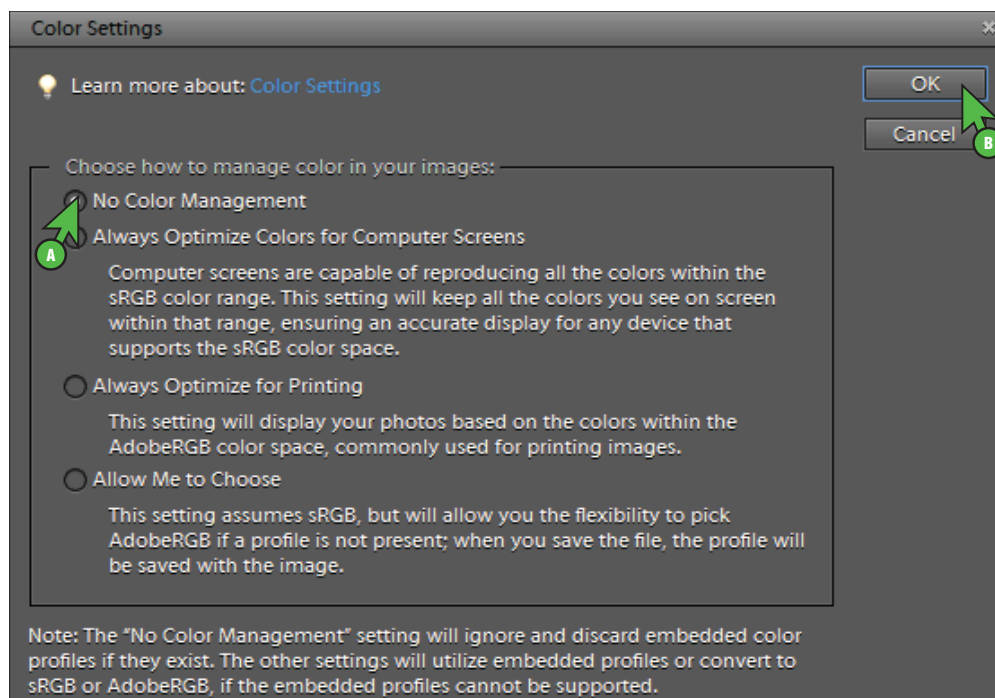


FIGURE 1

SubliJet IQ: Epson WF1100 Setup and Print Guide – Elements 8, 9 & 10 (cont'd 2:3)

- 2.) Configure Color Mode Settings: (see FIGURE 2)
 - a. At the top of your application, click **Image > Mode > RGB Color** (see FIGURE 2 > A).
 - b. A check mark should now be visible next to **RGB Color** (see FIGURE 2 > B).

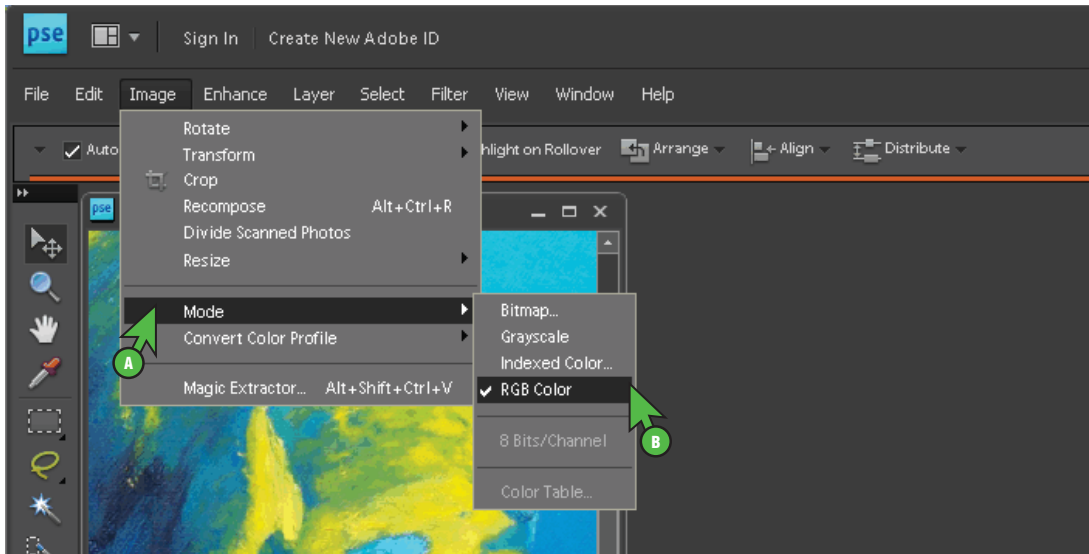


FIGURE 2

- 3.) Configure Embedded Profile: (see FIGURE 3)
 - a. At the top of your application, click **Image > Convert Color Profile > Convert to sRGB Profile** (see FIGURE 3 > A).

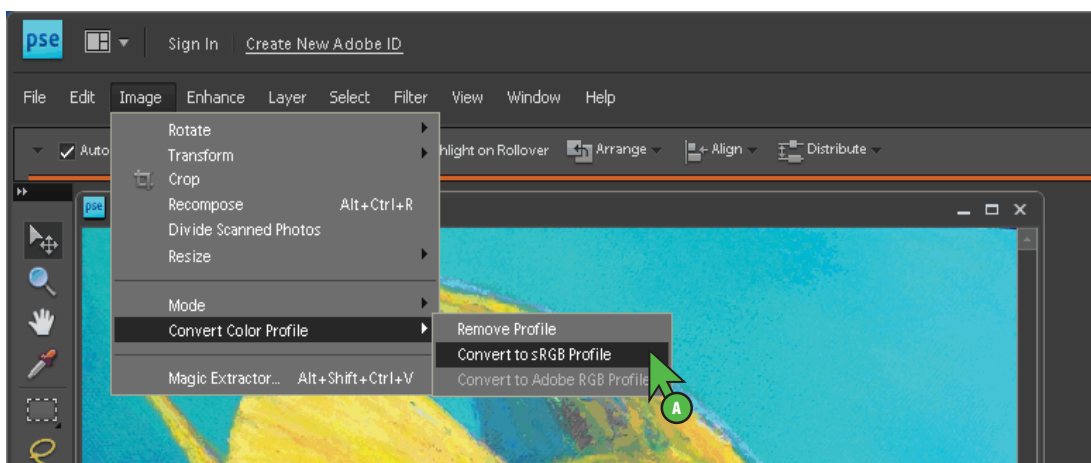


FIGURE 3

Printing from Elements with PowerDriver IQ WorkForce 1100

- 4.) Configure Print Settings: (see Figure 4)
 - a. At the top of the application click **File > Print**. This will open the **Print** window (see FIGURE 4 > A).
 - b. Click the [▼] drop-down arrow and select **PowerDriver IQ WorkForce 1100** (see FIGURE 4 > B).
 - c. At the bottom of the **Print** window, click **More Options** (see FIGURE 4 > C). This will open the **More Options** window (see FIGURE 4 > D).
 - d. In the **More Options** window, click **Color Management** (see FIGURE 4 > E).
 - e. Click the [▼] drop-down arrow and select **No Color Management** (see FIGURE 4 > F).
 - f. Click **OK** to save your selections (see FIGURE 4 > G). Clicking **OK** will return you to the **Print** window (see FIGURE 4 > A).
 - g. You can begin printing your image by clicking **Print** (see FIGURE 4 > H).

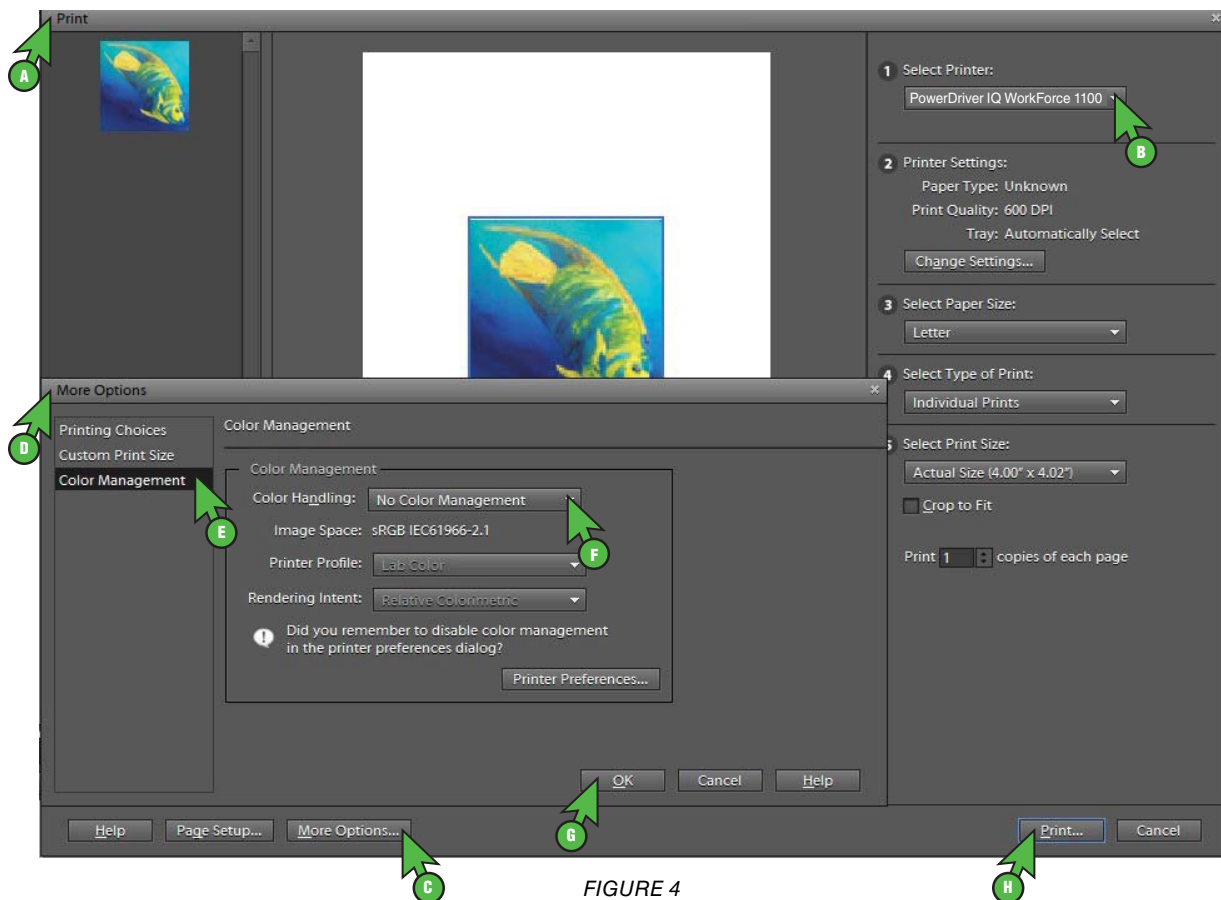


FIGURE 4

Congratulations! Photoshop Elements setup is now complete. Remember to select PowerDriver IQ WorkForce 1100 each time you are ready to print.