

Epson WorkForce 30 Quick Start Guide



IMPORTANT: BEFORE YOU BEGIN...

Before you install the SubliJet IQ Quick Connect Bulk Ink System, you should setup the Epson printer with the Epson supplied inks and driver. This will allow you to conduct a nozzle check to ensure the printer is working properly. Record the alpha-numeric value from the nozzle check (located on the far right side of the page). This is your Firmware Number which will be needed during the PowerDriver IQ Registration. Once completed, you can begin the bulk ink system installation process.

NOTE: Please remove the Epson cartridges before proceeding to step 1.

NOTE: Quick Start Guide for WorkForce 30 only



EPSON WORKFORCE 30 PRINTER



SUBLIJET IQ QUICK CONNECT BULK INK SYSTEM CONTENTS

Check to ensure you have all components shown in the pictures:

- | | | |
|--|--|--|
| 1.) Ink Box with Bulk Cartridge System | 4.) Small Tube Support (<i>WF 1100 only</i>) | 7.) Rubber Gloves |
| 2.) Large Tube Support (<i>WF 1100 only</i>) | 5.) (4) Individual Ink Bags | 8.) (4) Syringes & (2) Alcohol Prep Pads |
| 3.) (3) Plastic Dividers | 6.) (2) Lid Holders (<i>WF 1100 only</i>) | 9.) Plastic Arm (<i>WF 30 only</i>) |

QuickConnect® BULK INK SYSTEM WF 30 Installation Instructions: Setup



1.) Remove the protective cap from the ink bag valve.



2.) Match each ink bag with the appropriate color label found on the outside of the ink box. Next, push down the metal tab found on the connector located on the inside of the ink box. Then, insert the ink bag valve into the ink box connector. The metal tab will spring up and lock when the connection has been secured.



3.) Once each ink bag has been matched to its color label and connected, insert the plastic dividers between each bag. Put the ink box lid on the ink box to conceal the ink bags.



4.) Place the bulk cartridge system, tubing down, on top of the ink box with lid. Use care to avoid damaging the chip reset button (see green arrow in picture). Notice how the reset button is not making contact with the ink box. With the syringe plunger pressed down, insert the syringe tip into the septum of the cartridge. Next, slowly extract the plunger. Ink will start to flow through the tubing and into the cartridge. Remove the syringe from the septum when a small amount of ink has filled the syringe tip. Using a separate syringe for each color, repeat the process for the remaining four channels.



SubliJet IQ: Epson WorkForce 30 Quick Start Guide (cont'd 2:2)



5.) Lift the lid and power on the printer.



6.) Once the printer has completed initializing, press the ink out button.



7.) Raise the lid of the ink cartridge bay. Firmly grasp the lid and twist it sideways until it becomes dislodged. The lid will not be needed for proper functioning of the printer with either the bulk ink system or individual ink cartridges.




8.) The ink cartridge bay should look like the picture above after removing the ink cartridge cover.



9.) Gently insert the bulk cartridge system into the cartridge bay. Use care to avoid damaging the chip reset button. The black cartridge should be positioned on the far left side and the yellow on the far right.



10.) Firmly push the bulk cartridge system into place. You should hear a slight clicking sound when each cartridge becomes engaged. Again, please use care to avoid damaging the chip reset button.

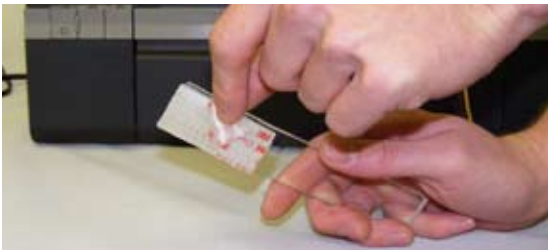

11.) Using the alcohol prep, clean the surface of the printer in the upper right corner above the docking station where the plastic arm will be positioned. Then, remove the film backing from the plastic arm.



12.) The plastic arm should be aligned so that the edge of the adhesive Velcro is situated at the upper right corner above the docking station. Press the plastic arm firmly to set the adhesive Velcro.




13.) Align the velcro strips on the tubing with the velcro strips on the arm.

NOTE: Be sure to align the left edge of the tape with the left edge of the arm. This is to eliminate the possibility of too much or too little slack in the tubing.



14.) Press the ink out button to begin the cartridge recognition cycle. Once the cycle is complete, the Ink Out light should turn off. If the light does not turn off, follow the **Chip Reset Instructions** to remedy. Also, check that the Bulk Cartridge System has been inserted firmly in place.

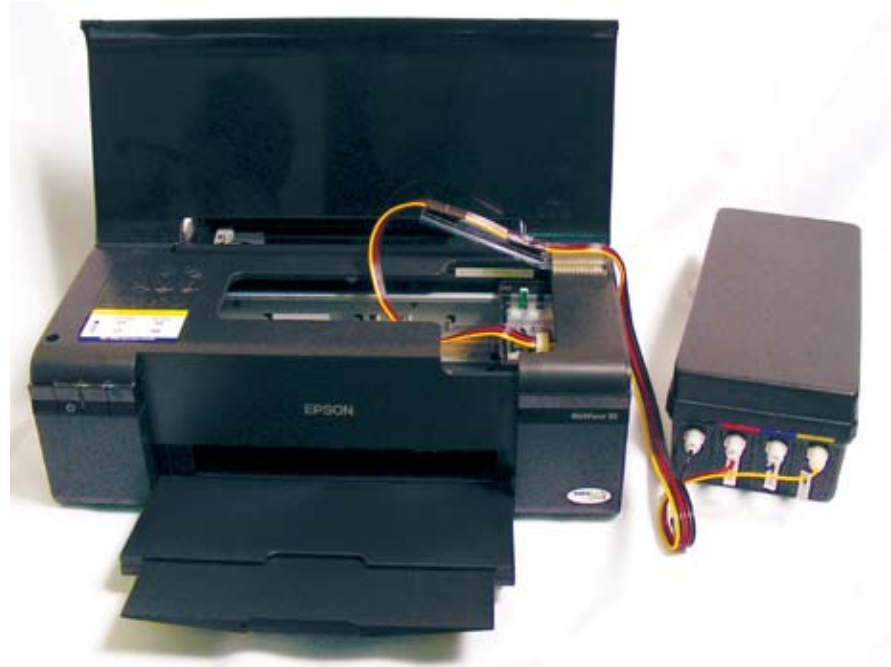

Congratulations! You have successfully installed the SubliJet IQ Quick Connect Bulk Ink System. Be sure the printer is placed on a level surface next to the ink box.

CAUTION: The ink box should never be raised higher than the printer as this will cause ink to leak into, and damage the printer.



TIPS TO ENHANCE PRINTING

- Make sure you install, register and configure the PowerDriver IQ.
- Perform a Nozzle Check from the PowerDriver. A few cleaning cycles may be necessary to get a good Nozzle Check.
- There may be small pockets of air in the lines after setup. If so, these will clear after a few prints are run.
- When the printer is idle, it is recommended to perform a nozzle check every few days to avoid any nozzle loss due to clogging.
- If the system is to be moved, use the tube clamps to seal the tubes at the ink box. Do not leave the tubes clamped for an extended period of time or the tubes will become permanently kinked, preventing ink flow.